



Pole Tent Liner

Installation Instructions


Preliminary set-up: During the tent installation the liner hardware needs installed. Pole tents require a rope pulley system that connects to the pole tent adapter and the center hub assembly. The pole tent adapter is installed before the center pole(s) are installed.



1. Insert the pole pin of the center pole through the hole in the pole tent adapter. Ensure the ropes are connected to the pole tent adapter pulley system. Repeat at all center poles.
2. Make sure the tent is square, level and tensioned properly and the center poles are correct height. Once the tent is erected properly, you can begin installing the Hi Pro Tent Liner.
3. For new liners it is recommend that each liner section be removed from the shipping plastic wrap and be pre-conditioned before the first installation. This is done by thoroughly fluffing and shaking out the liner to begin removing the factory folds. Stuff the liner section into their storage bags (like you would a sheet into a laundry bag). If time allows, repeat this process several times, letting the liner rest for a day between "re-stuffing." An alternate process is to pre-wash the liner to remove the sizing in the fabric and to remove the factory creases.
4. Always use a drop cloth to keep the Hi-Pro Tent Liner clean and damage free. Proper installation will ensure that the liner never touches the ground.

Set Up Instructions:

1. Bolt the rope pulley to the center hub assembly, run the rope through the pulley system.
2. Fit the two piece center hub assembly around the center pole approximately 5' feet from the ground.

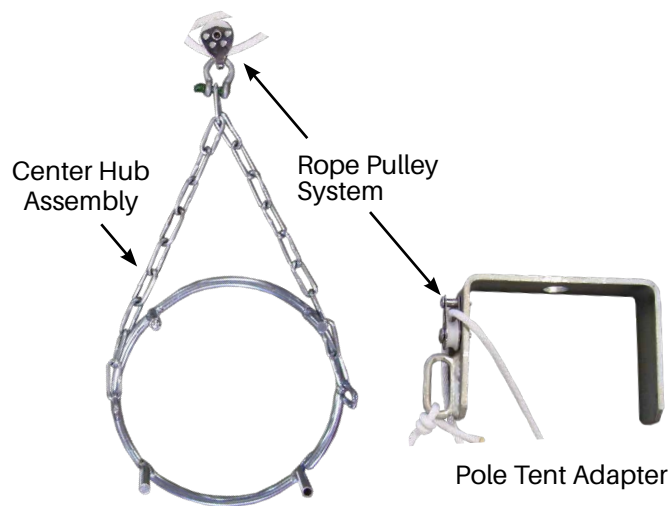

3. Arrange the liner storage bags to correspond with the tent tops end and mid sections.
4. The liner sections should be packed into the liner storage bag with the vinyl hub at the top. At an end section start by installing the liners vinyl hub to the center hub assembly. Place the grommet of the vinyl hub through the protrusions on the center hub assembly.



5. Starting at the corner clip the snap hooks to the inside perimeter rope with the webbing facing up. Repeat at the adjacent corner.



6. Extend the Hi Pro Liner section along the tent. Repeat at the adjacent lace line.



7. Continue to clip all the snap hooks to the perimeter rope.



8. For each mid section, repeat the process. Join the mid section to the previously installed section by fastening the buckles together at all hook and loop seam locations.



9. Attach the hook and loop sections on the mid liner and end liner sections together. For each mid section, **repeat the process**. Attach the hook and loop to the remaining end section.

10. The Hi-Pro Liner is ready to be raised. Pull on the ropes to raise the Hi-Pro Liner approximately halfway up the pole. Note: The liner must be lifted evenly to prevent the center hub assembly from bending.

11. Finish by raising the center pole assembly to their utmost height and tying the rope to the center pole. When properly positioned the Hi-Pro liner should drape evenly and hang with ease.

